




**WEIBANG®**  
GARDEN MACHINES

M0103100

Yangzhou Weibang Garden Machine Company Limited  
Hanjiang Industrial Park, Yangzhou City, Jiangsu  
Province 225127, P. R. China

**Lawn Mower**

Model Numbers:  
WB486SBV-R (48V)    WB486SBV-R (48VB)  
WB486SKV-R (48PRO)    WB486SKV-R (48PRO BBC)  
**WB487SCV-R    WB487SCV-R-BBC**  
WB567SBV-R (56V)    WB567SBV-R (56VE)  
WB567SKV-R (56PRO)  
**WB567SCV-R    WB567SCV-R-BBC**

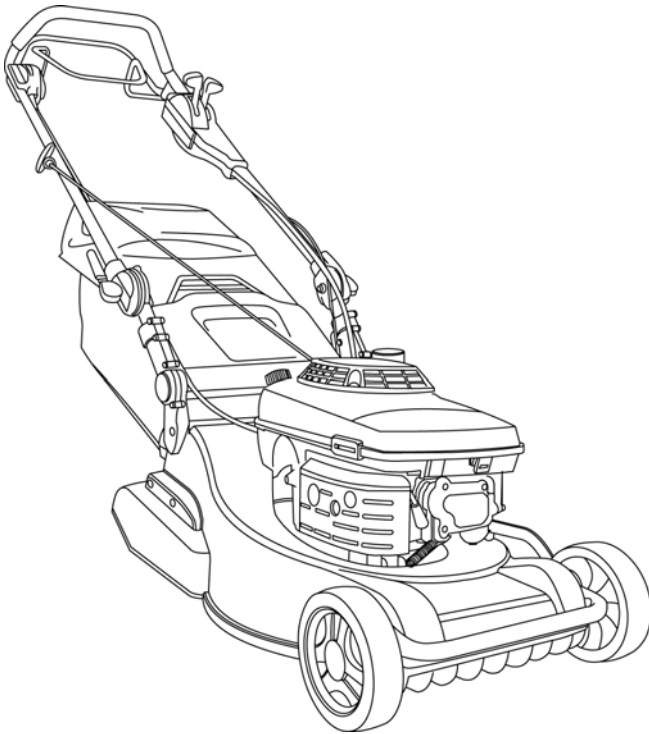

**Operator's manual**  
(Original instruction)



Fold along dotted line


Place  
Stamp  
Here

ATTN: SERVICE DEPARTMENT

Fold along dotted line




M0103100



General hazard safety alert

Read Operator's manual

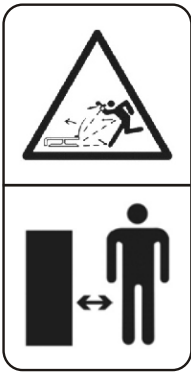

Beware of thrown or flying objects to bystanders.


Keep bystanders away from the machine.



Beware of sharp blades



Remove spark plug before maintenance

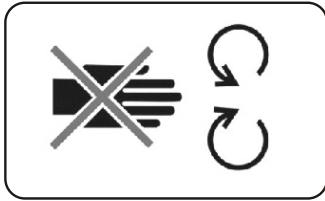

Caution - Do not touch rotating cutting means



Never operate the lawn mower with discharge chute open



Do not mow excessively steep slopes, mow across the face of slopes, never up and down



Never pick up or carry a lawnmower while the engine is running, Use extreme caution when reversing or pulling the lawnmower towards you.



The guaranteed value is:  $L_{WA}=96\text{dB(A)}$   
WB486SBV-R (48V) WB486SBV-R (48VB)  
WB486SKV-R (48PRO)  
WB486SKV-R (48PRO BBC)  
WB487SCV-R WB487SCV-R-BBC



The guaranteed value is:  $L_{WA}=98\text{dB(A)}$   
WB567SBV-R (56V)  
WB567SBV-R (56VE) WB567SKV-R (56PRO)  
WB567SCV-R WB567SCV-R-BBC



Keep hands and feet away



Wear eye and ear protection.

## English

- Read the operating instructions before you use the machine!
- Keep third parties away from the danger zone!
- When you are reading the instructions for use, Please unfold the front and back pages.

## CONTENT

<b>SAFETY REGULATIONS</b>	01-04
General Operation	01
Slope Operation	01
Children	01
General Instruction For Operation	02
Product Specifications	03
<b>ASSEMBLY</b>	05
To remove lawn mower from carton	05
How to set up your lawn mower	05
To assemble grass catcher	05
Assemble engine starting knob	05
<b>OPERATION</b>	06-09
<b>CUSTOMER RESPONSIBILITIES</b>	10-11
<b>SERVICE AND ADJUSTMENTS</b>	12
<b>STORAGE</b>	13-14
<b>WARRANTY</b>	15

# SAFETY REGULATIONS

## I. General Operations

● Before starting to use this machine, read, understand and follow all instructions that are provided in this manual. Be thoroughly familiar with the controls and the proper use of the machine before starting operations.



**WARNING: Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.**

● This machine may only be operated by responsible persons, who are familiar with the operating instructions. Never allow children or people unfamiliar with these instructions to use the lawnmower. Local regulations can restrict the age of the operator

● To prevent injury, be sure that there are no persons in the immediate area where you are mowing. If any person enters this area, stop the machine by releasing the drive control bar. Never mow while people, especially children, or pets are nearby;

● Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.



**CAUTION: Do not operate the mower when barefoot or while wearing open sandals. Always wear robust footwear when mowing.**

● While mowing, always wear substantial footwear and long trousers. Do not operate the equipment when barefoot or wearing open sandals;

● Thoroughly inspect the area where the equipment is to be used and remove all such objects as rocks, toys, wire, bones, sticks and any other items, which can be thrown by the machine through the discharge opening.

● Do not pull the mower backwards, unless this is absolutely necessary. Always look down and behind you, before and while moving backwards. Use extreme caution when reversing or pulling the lawnmower towards you.

● Before operating the mower, make sure that all protective screens, the grass catcher and other protective devices are properly installed. Never operate the lawnmower with defective guards, or without safety devices, for example deflectors and/or grass catchers, in place.

● Observe the instructions of the manufacturer, for proper operation and installation of accessories. Only those accessories that have been approved by the manufacturer may be used.

● Make sure that the blade(s) of the mower is (are) not rotating, before crossing gravel drives, walkways or roads.

● Stop the engine (motor) and wait until the blade comes to a complete stop, before removing the grass catcher.

● Mowing should only be done during daylight or under good artificial lighting.

● Do not operate the machine while under the influence of alcohol or drugs.

● Never operate the mower in wet grass, where feasible. Always be sure of your footing: Keep a firm hold on the handle and walk; never run.

● Before starting the engine (motor), disengage all blade and self-propelling mechanism or drive clutch on mowers so equipped.

● If the mower should start to vibrate abnormally, stop the engine (motor) and check immediately for the cause. Vibration is generally a warning of trouble.

● Keep hands and feet away the enclosure.

● Worn parts should be referred to our repair shop to be replaced. If necessary, contact the service specified address.

● Before using the machine, inspect the machine by visual to determine whether the cutting, fastening bolts and the entire mower deck worn or damaged. To avoid an imbalance may be, replace worn out or damaged cutting attachment bolts sets.

## II SLOPE OPERATION

● Slopes are a major factor related to slip and fall accidents, which can result in severe injury. All slopes require extra caution. If you feel uneasy on a slope, do not mow it.

### DO:

● Mow across the face of slopes: never up and down. Exercise extreme caution when changing direction on slopes.

● Remove obstacles such as rocks, tree limbs, etc.

● Watch for holes, ruts, or bumps. Tall grass can hide obstacles.

### DO NOT:

● Do not trim near drop-offs, ditches or embankments. The operator could lose footing or balance.

● Do not trim excessively steep slopes.

● Do not mow on wet grass. Reduced footing could cause slipping.

## III. CHILDREN

● Tragic accidents can occur if the operator is not alert to the presence of children. Children are often attracted to the machine and the mowing activity. Never assume that children will remain where you last saw them.

● Keep children out of the trimming area and under the watchful care of another responsible adult.

● Be alert and turn machine off if children enter the area.

● Before and while walking backwards, look behind and down for small children.

● Never allow children to operate the machine.

● Use extra care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.

## IV. GENERAL INSTRUCTIONS FOR WORKING WITH YOUR LAWNMOWER

● **WARNING**-petrol is highly flammable. Use extra care in handling petrol and other fuels. They are flammable and vapours are explosive.

-Store fuel in containers specially designed for this purpose; Use only an approved fuel container

-Refuel outdoors only and do not smoke while refueling; Never refuel the machine indoors.

- Never store the machine or fuel container near an open flame, such as a water heater.

-Add fuel before starting the engine. Never remove the cap of the fuel tank or add petrol while the engine is running or when the engine is hot; Allow the engine to cool before refuelling.

-If petrol is spilled, do not attempt to start the engine but move the machine away from the area of spillage and avoid creating any source of ignition until petrol vapors have dissipated.;

-Replace all fuel tanks and container caps securely;

- Do not smoke in the neighbourhood of the mower.

● Replace faulty silencers

● Clean up any oil or fuel spills.

● Do not start the engine when standing in front of the discharge chute.

● Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.

● Do not operate the engine in a confined space where dangerous carbon monoxide fumes can collect; Walk, never run.

● Always be sure of your footing on slopes;

● Do not change the engine governor settings or over-speed the engine;

● Never make adjustments or repairs with the engine (motor) running. Disconnect the sparkplug wire, and keep the wire away from the plug to prevent accidental starting.

● Check regularly that nuts and bolts, especially blade attachment bolts, are fastened tightly and keep the equipment in a good condition.

● Never tamper with safety devices. Check their proper operation regularly.

● Make sure that grass, leaves or other debris does not collect in the mower; check regularly and remove such residues to prevent blocking.

● Stop and inspect your lawnmower if you strike any object. Repair, if necessary, before restarting.

● Never attempt to make wheel height adjustments while the engine (motor) is running.

● Grass catcher components are subject to wear,

damage and deterioration, which could expose moving parts or allow objects to be ejected. Frequently check these components and, if necessary, replace damaged components with parts recommended by the manufacturer.

● Mower blades are sharp and can cause injuries. Wrap the blade(s) or wear gloves when handling them, and use extra caution during blade maintenance.

● Be especially careful in case you reverse the mower or going to use the machine.

● Stop the blade(s) if the lawnmower has to be tilted for transportation when crossing surfaces other than grass, and when transporting the lawnmower to and from the area to be mowed.

● Start the engine or switch on the motor carefully according to instructions and with feet well away from the blades

● Do not tilt the lawnmower when starting the engine or switching on the motor, except if the lawnmower has to be tilted for starting. In this case, do not tilt it more than absolutely necessary and lift only the part which is away from the operator.

● Never pick up or carry a lawnmower while the engine is running

● Stop the engine and disconnect the spark plug wire:

-before clearing blockages or unclogging chute;

-before checking, cleaning or working on the lawnmower;

-after striking a foreign object. Inspect the lawnmower for damage and make repairs before re-starting and operating the lawnmower;

-if lawnmower starts to vibrate abnormally (check immediately).

● Stop the engine:

-whenever you leave the lawnmower;

-before re-fuelling.

● Reduce the throttle setting during engine shut down and, if the engine is provided with a shut-off valve, turn the fuel off at the conclusion of mowing;

● Allow the engine to cool before storing in any enclosure

● Never store the equipment with petrol in the tank inside a building where fumes can reach an open flame or spark.

● To reduce the fire hazard, keep the engine, silencer, battery compartment and petrol storage area free of grass, leaves, or excessive grease.

● Check the grass catcher frequently for wear or deterioration

● If the fuel tank has to be drained, this should be done outdoors.



**WARNING: Engine exhaust, some of its constituents and certain vehicle components contain or emit chemicals known to cause cancer and birth defects or other reproductive harm.**



Proper Use

The gasoline lawn mower is for private use in the home and garden suitable hobby. The mower may only be used for the maintenance of grass or lawns in the home and garden hobby can be used. Any other application that is not listed in this guide is prohibited.

The above use and safety instructions must be strictly adhered to. The manufacturer assumes no liability for any damage caused by improper operation, improper use, misuse, unauthorized repairs or alterations performed.

PRODUCT SPECIFICATIONS

Model	WB486SBV-R (48V) WB486SBV-R (48VB)	WB486SKV-R (48PRO) WB486SKV-R (48PRO BBC)	WB487SCV-R WB487SCV-R-BBC	WB567SBV-R (56V) WB567SBV-R (56VE)	WB567SKV-R (56PRO)	WB567SCV-R WB567SCV-R-BBC
Nominal power	2.7kW	3.45kW	3.1kW	3.14kW	3.45kW	3.1kW
Cutting width	477.5mm	477.5mm	477.5mm	557.5mm	557.5mm	557.5mm
Motor	Briggs&stratton 750EX DOV	KAWASAKI FJ180V	WEIBANG LC 1P70FC	Briggs&stratton 850E Series	KAWASAKI FJ180V	WEIBANG LC 1P70FC
Moving type	Self-propelled	Self-propelled	Self-propelled	Self-propelled	Self-propelled	Self-propelled
Electric start	X X	X X	X	X ✓	X	X
Drive speed	0.70-1.35m/s	0.86-0.98-1.29 m/s	0.70-1.35m/s 0.86-0.98-1.29 m/s	0.68-1.39m/s	0.86-0.98-1.29 m/s	0.68-1.39m/s 0.86-0.98-1.29 m/s
WBAVS	Yes	Yes	Yes	Yes	Yes	Yes
Blade brake clutch	X ✓	X ✓	X ✓	X	X	X ✓
Cutting height	13-67mm	13-67mm	13-67mm	13-67mm	13-67mm	13-67mm
Cutting height adjustment	13	13	13	13	13	13
Grass bag capacity	65L	65L	65L	90L	90L	90L
Balde speed Max.	2800/min	2800/min	2800/min	2800/min	2800/min	2800/min
Net weight	57kgs 59kgs	64.5kgs 65.5kgs	62kgs 65.9kgs	59kgs 64.7kgs	68.3kgs	67.4kgs 68.4kgs
Sound power level(L <sub>WA</sub> ) K=2.5dB(A)	96.5dB(A)	93.8dB(A)	97.9dB(A)	95.6dB(A)	96.6dB(A)	98.4dB(A)
Sound pressure level(L <sub>PA</sub> ) K=2.5dB(A)	84.5dB(A)	82.2dB(A)	87.7dB(A)	83.6dB(A)	84.2dB(A)	88.2dB(A)
Vibration K=1.5m/s <sup>2</sup>	3.70m/s <sup>2</sup>	3.67m/s <sup>2</sup>	2.98m/s <sup>2</sup>	4.36m/s <sup>2</sup>	4.12m/s <sup>2</sup>	6.07m/s <sup>2</sup>
Blade type	GM48C000000010 GM48A000000140	GM48C000000010 GM48A000000140	GM48C000000010 GM48A000000140	GM56C000000010 GM56C000000010	GM56C000000010	GM56C000000010 GM56A000000150

**Note:** The lawnmowers' net weight is depending on the different model of engine.

These specifications are supplied as a reference,so that you will be familiar with the lawnmower. We maintain the right to make technical and other changes without advance notification.It is therefore possible that some of the details in this manual may not coincide completely with your machine.

**CONGRATULATIONS** on your purchase of a new lawnmower. It has been designed, engineered and manufactured to give you the best possible dependability and performance.

Should you experience any problem you cannot easily remedy, please contact the nearest authorized service center/department. We have competent, well-trained technicians and the proper tools to service or repair this lawnmower.

Please read and retain this manual. The instructions

will enable you to assemble and maintain your lawn mower properly. Always observe the “SAFETY REGULATIONS”

SERIAL NUMBER \_\_\_\_\_

DATE OF PURCHASE \_\_\_\_\_

THE MODEL AND SERIAL NUMBERS WILL BE FOUND ON A DECAL ATTACHED TO THE REAR OF THE LAWNMOWER HOUSING.

YOU SHOULD RECORD BOTH SERIAL NUMBER AND DATE OF PURCHASE AND KEEP IN A SAFE PLACE FOR FUTURE REFERENCE.

We recommend that you write down the serial number and purchase date in your user manual, so that you will always have it at hand.

CUSTOMER RESPONSIBILITIES

- Read and observe the safety regulations contained in this manual.
- Follow a regular schedule for maintaining, caring for and using your lawnmower.
- Follow the instructions in the "Customer responsibilities" and "Storage" sections of this owner's manual.
- Remember that the operator is responsible for accidents with other persons or their property.

SETTING LEAD-ACID BATTERY(if equipped)

Activating Battery

Your new machine was shipped without electrolyte in the lead-acid battery. You need inject electrolyte into the battery to activate it before starting the machine.

- Unscrew two screws to remove battery shield in rear of mower chassis.
- Place the battery horizontally, remove the sealing tape.
- Insert the funnel gently into the pouring mouth.
- Make the injection port of electrolyte container embedded gently in the draft tube, vertical force the container, then started breaking the seal squeezed and injection electrolyte. Make sure if there is bubbles in each injection port, and the liquid level drops.
- Make sure if there is residual electrolyte by gently tapping the container and the electrolyte injection funnel to completely discharge electrolyte; slowly remove the container and injection funnel, and then placed them in a packaging box to discard.
- Align battery sealing plug strip to injection port, and then flatten the top surface until it is flush with the top of battery.
- Replace battery shield and tighten two screws.

Charging Battery

If the machine must be used immediately, the lead-acid battery may have enough of a charge to start the engine. The engine will charge the battery automatically during later mowing work. Charge a lithium polymer battery at least 15 minutes.

**NOTE:** Charge the battery after the initial use of the machine to help ensure it is fully charged. Charge a new 12V lead-acid battery for 5-10 hours to ensure a full charge. Ask your local deal for details.

WARNING

Do not short circuit battery wires. Remove any jewelry before working on or nearthe battery or electric start system. Failure to follow these instructions could result in personal injury or properly damage.

ACTIVATE LITHIUM BATTERY(if equipped)

Unopened lithium battery is in sleeping mode, you need to activate it before usage. Install the battery in corresponding charger for about 10 seconds, then the battery is activated and working properly. (See engine manual)

After mowing work, please checking the power level indicator of lithium battery, if less than two lights, charge it until at least two lights.

In sleeping mode, the battery's power storage time can be significantly extended.

Return an activated lithium battery to sleeping mode:

a) Press and hold the power level indicator button. The LED light will light up for about 4 to 5 seconds, and then turn off. After about 15 seconds, power indicator lights up again.



b) Release the button, and then LED light turns off one by one. Now the battery is in sleeping mode.

## ASSEMBLY

Read these instructions and this manual in its entirety before you attempt to assemble or operate your new lawn mower.

**IMPORTANT:** THIS LAWN MOWER IS SHIPPED WITHOUT OIL OR GASOLINE IN THE ENGINE.

Your new lawn mower has been assembled at the factory with the exception of those parts left unassembled for shipping purposes. All parts such as nuts, washers, bolts, etc., necessary to complete the assembly have been placed in the parts bag. To ensure safe and proper operation of your lawn mower, All parts and hardware you assemble must be tightened securely. Use the correct tools as necessary to ensure proper tightness.

### I. TO REMOVE LAWN MOWER FROM CARTON

- Remove scotch tape on one end of the carton and open the end panel.
- Roll lawn mower out of carton and check carton thoroughly for additional loose parts.
- Remove loose parts included with mower.
- Remove all packing materials except padding between upper and lower handle and padding holding operator presence control bar to upper handle.


### II. HOW TO SET UP YOUR LAWN MOWER

- Lift and unfold upper handle to desired height and pull two levers on both sides to lock upper handle. Refer to Service and Adjustments section.

**CAUTION:** Unfold the handle carefully to avoid pinching and damaging the control cables.

- Remove any packing material from around control bar.


**CAUTION:** Wear protective gloves during operation of setting up your mower.

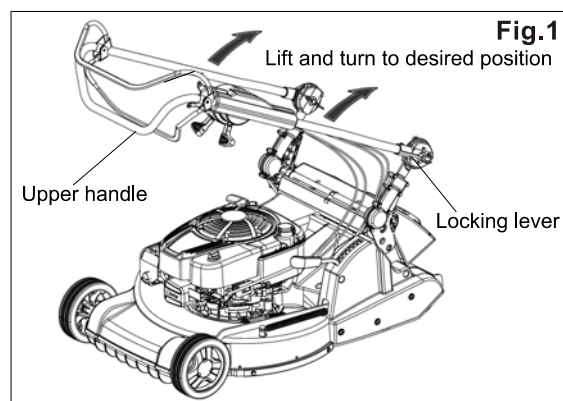

### III. TO ASSEMBLE GRASS CATCHER

- Put grass catcher frame into grass bag with rigid part of bag on the bottom. Make sure the frame handle is outside of the bag top.
- Slip vinyl bindings over frame.


**NOTE:** If vinyl bindings are too stiff, hold them in warm water for a few minutes. If bag gets wet, let it dry before using.

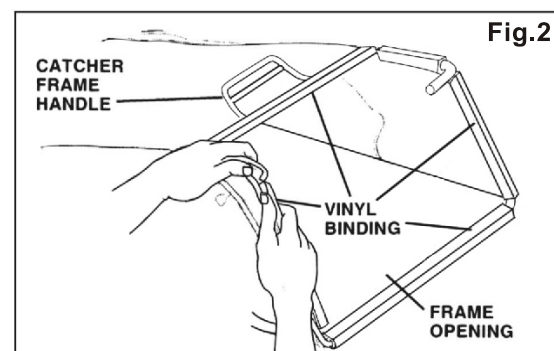

### IV. ASSEMBLE ENGINE STARTER HANDLE


- Press down engine brake handle by left hand, and meanwhile pull the knob of starter rope back to the hook ring on upper handle, assemble the rope into the hook ring through ring clearance.
- Always keep starting rope in hook ring during all mowing work.

**WARNING:** The safety position of starting engine is in the back of upper handle. Users must keep the rope in middle of the hook ring during starting engine and mowing work. It is danger to starting engine away from the safety position, which will lead to the risk of feet hurting.

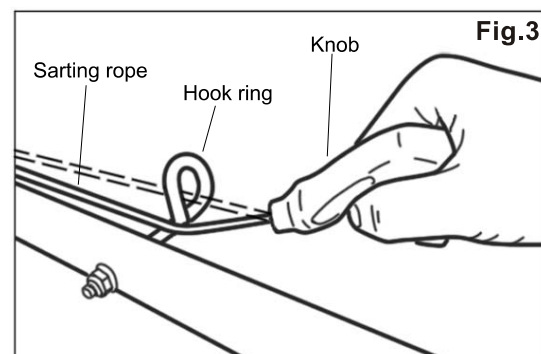

## OPERATION

These symbols may appear on your lawn mower or in literature supplied with the product. Learn and understand their meaning.

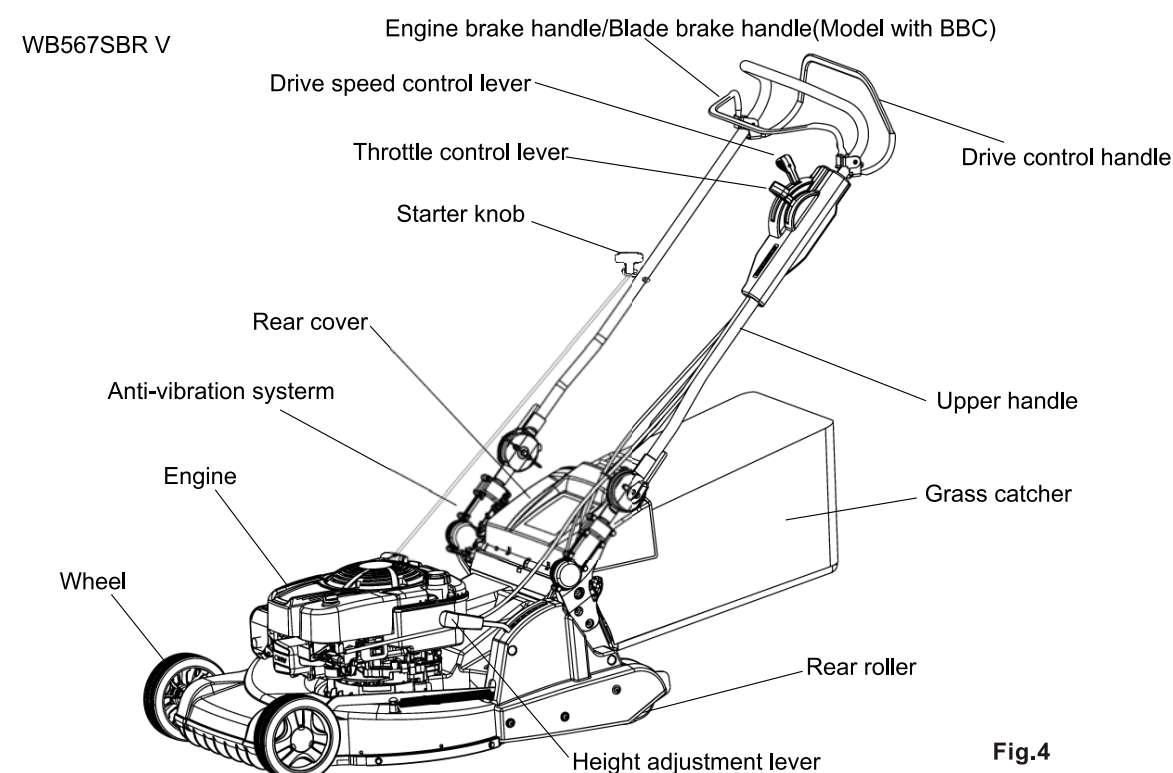

**WARNING:** The operation of any lawn mower can result in foreign objects thrown into the eyes, which can result in severe eye damage. Always wear safety glasses or eye shields while operating your lawn mower or performing any adjustments or repairs. We recommend wide vision safety mask over spectacles or standard safety glasses.

**DRIVE CONTROL BAR**-used to engage power-propelled forward motion lawn mower.

**THROTTLE CONTROL**-used for starting the engine and allows you to select either fast or slow engine speed.

**DRIVE SPEED LEVER** -used for adjusting the drive speed and allows you to select either fast or slow speed.

**STARTER HANDLE**-used for starting the engine.

**PRIMER**-pumps additional fuel from the carburetor to the cylinder for use when starting a cold engine.


**OPERATOR PRESENCE CONTROL BAR**-engine brake, it must be held down to the handle to start the engine. Release it to stop the engine.

### HOW TO USE YOUR LAWN MOWER ENGINE SPEED

A throttle located on the side of the upper handle controls the engine speed. Fast position is for normal cutting, trimming and better grass bagging. Slow position is for light cutting, trimming and fuel economy.

### ENGINE CONTROL ZONE

- Your lawn mower is equipped with an operator presence control bar which requires the operator to be positioned behind the lawn mower handle to start and operate the lawn mower.

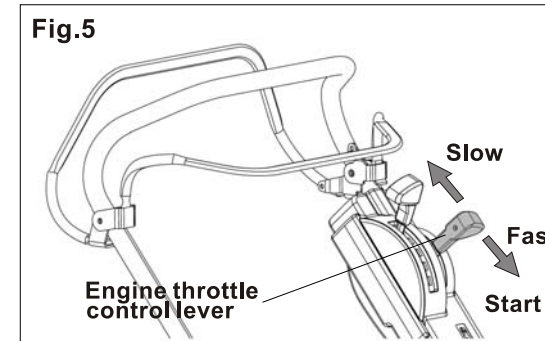




## TO OPERATE DRIVE SYSTEM

● To start forward motion, lift drive control bar up to handle.

● To stop forward motion, release drive control bar.

**IMPORTANT:** ALWAYS KEEP DRIVE CONTROL FULLY ENGAGED AGAINST HANDLE WHEN IN USE.


Fig.6

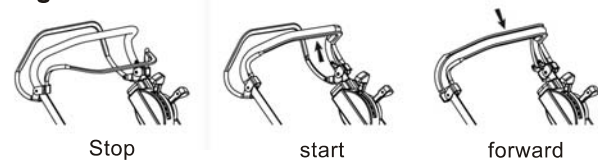

## ENGAGE THE BLADE-CLUTCH (See Fig.7) only for machines with BBC

1. For safety, the blade-clutch-lever can not be engaged directly after releasing. Push the lever forward until it make a 'click' sound, and then you can engaged the clutch again.

2. Press the blade-clutch-lever close to the handle-bar completely to engage blade.

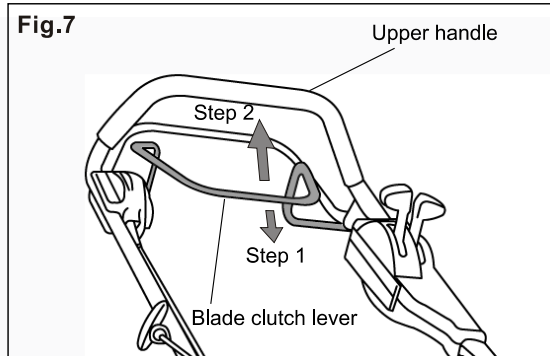


3. Release the lever about 2" away from the handle-bar, until the lever make a 'click' sound. And then re-press the lever and hold it together with the handle-bar.

4. Release the blade-clutch-lever completely to dis-engage and stop the blade.

## ADJUSTING THE DRIVE SPEED (FOR SPEED ADJUSTABLE MODEL)(See Fig.8)

**NOTE:** The speed may only be adjusted when the engine is running in order to avoid damage!

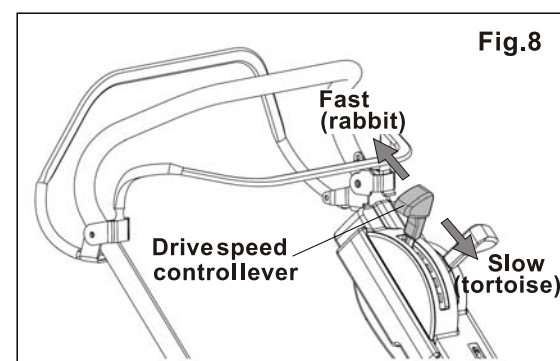

-The driving speed can be continuously adjusted by using the adjustment lever mounted on the upper hand.

-First press the lever slightly downwards and adjust to the desired speed. The lever automatically clicks back into the nearest new position.

-Position "rabbit" = fast (max. speed)

-Position "tortoise" = slow (min. speed)

## TO ADJUST CUTTING HEIGHT

● Never adjust the cutting height with the motor still running.


● The mower is adjusted to one cutting height upon delivery.

● You can set the desired cutting height with adjustment lever to fit different terrain.

Pull the lever out of the catch, move to the desired position and let it fall back into the catch.

## WARNING


The lawnmower can only be used on level lawns if the lowest cutting height is being used.

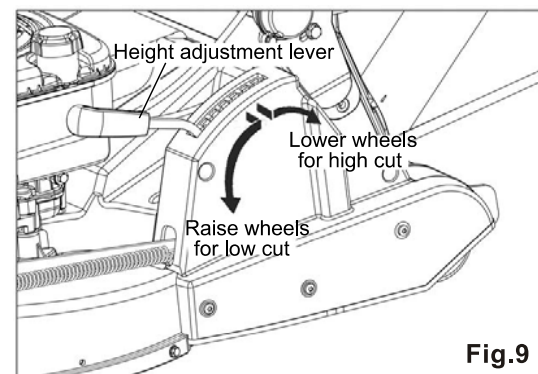

## TO ATTACH GRASS CATCHER

1. Lift the rear door of the lawn mower and place the grass catcher frame side hooks into the slots of the rear door.

2. The grass catcher is secured to the lawn mower housing when the rear door is lowered onto the grass catcher frame.

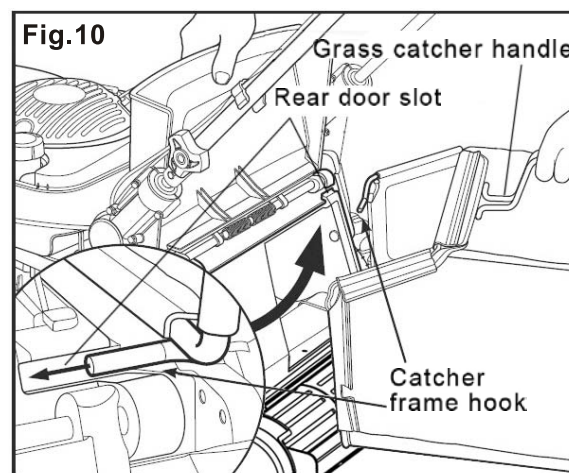


**CAUTION:** Do not run your lawn mower without clipping deflector or approved grass catcher in place. Never attempt to operate the lawn mower with the rear door removed or propped open.

## TO EMPTY GRASS CATCHER

1. Lift up on grass catcher using the frame handle.
2. Remove grass catcher with clippings from under lawn mower handle.
3. Empty clippings from bag using both frame handle and bag handle.

**NOTE:** When emptying the grass catcher, do not drag the bag over the ground; it will cause unnecessary wear.

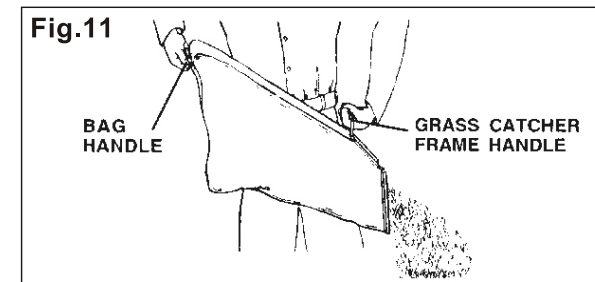

**CAUTION:** During operation of emptying clippings from grass catcher, please wear protective gloves to prevent environmental influence on your skin.

## BEFORE STARTING ENGINE

### ADD OIL

Your lawnmower is shipped without oil in the engine. Engine holds approximately 0.6L refer to engine manufacturers specifications in engine hand book. For type and grade of oil to use, see "ENGINE" in Customer Responsibilities section of this manual.

1. Be sure lawnmower is level and area around oil fill is clean.
2. Remove engine oil cap and fill to the full line on the dipstick. Pour oil slowly. Do not over fill.

**NOTE:** Allow oil to settle down into engine for accurate reading. To read proper level, tighten engine oil cap, then remove it to read the dipstick.

3. Reinstall engine oil cap and tighten.

● Check oil level before each use. Add oil if needed. Fill to full line on dipstick.

● Change the oil after every 25 hours of operation or each season. You may need to change the oil more often under dusty, dirty conditions.

### ADD GASOLINE

**NOTE:** Before filling fuel tank, remove and discard the debris plug that is inside the tank.

Fill fuel tank. Use fresh, clean, regular unleaded gasoline with a minimum of 87 octants. Do not mix oil with gasoline. Purchase fuel in quantities that can be used within 30 days to assure fuel freshness.



**WARNING:** Experience indicates that alcohol blended fuels (called gasohol or using ethanol or methanol) can attract moisture which leads to separation and formation of acids during storage. Acidic gas can damage the fuel system of an engine while in storage. To avoid engine problems, the fuel system should be emptied before storage of 30 days or longer. Drain the gas tank, start the engine and let it run until the fuel lines and carburetor are empty. Use fresh fuel next season. See storage instructions for additional information. Never use engine or carburetor cleaner products in the fuel tank or permanent damage may occur.



**CAUTION:** Fill to bottom of gas tank filler neck. Do not overfill. Wipe off any spilled oil or fuel. Do not store, spill or use gasoline near an open flame.

## TO START ENGINE

**NOTE:** Due to protective coatings on the engine, a small amount of smoke may be present during the initial use of the product and should be considered normal.

1. To start a cold engine, push primer (if equipped) three times before trying to start. Use a firm push. This step is not usually necessary when starting an engine, which has already run for a few minutes.

2. Move throttle control lever to fast position.

3. Hold operate presence control bar down to the handle and pull starter handle quickly. Do not allow starter rope to snap back. Or turn the key clockwise (if it is equipped an electric starter) to start the machine, and release the key after the engine run.



**CAUTION:** If the engine fails to start in 30 second after repeated starting operation by pulling the starter knob, please stop your operation and check the causes. See trouble shooting.

## TO STOP ENGINE

● To stop engine, release operator presence control bar

● Or remove the key from the starting switch and keep it safely before leaving your machine to prevent children from starting the engine accidentally.

**NOTE:** In cooler weather it may be necessary to repeat priming steps. In warmer weather over priming may cause flooding and engine will not start. If you do flood engine, wait a few minutes before attempting to start and do not repeat priming steps.




**WARNING:** The mower with electric starter is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

MOWING TIPS

- Under certain conditions, such as very tall grass, it may be necessary to raise the height of cut to reduce pushing effort and to keep from overloading the engine and leaving clumps of grass clippings. It may also be necessary to reduce ground speed and /or run the lawn mower over the area a second time.
- For extremely heavy cutting, reduce the width of cut by overlapping previously cut path and mow slowly.
- For better grass bagging and most cutting conditions, the engine speed should be set in the fast position.
- Pores in cloth grass catchers can become filled with dirt and dust with use and catchers will collect

less grass. To prevent this, regularly hose catcher off with water and let dry before using.

- Keep top of engine around starter clear and clean of grass clippings and chaff. This will help engine air flow and extend engine life.

**IMPORTANT:** FOR BEST PERFORMANCE, KEEP MOWER HOUSING FREE OF BUILT-UP GRASS AND TRASH. SEE “CLEANING” IN CUSTOMER RESPONSIBILITIES SECTION OF THIS MANUAL.

CUSTOMER RESPONSIBILITIES

MAINTENANCE SCHEDULE

FILL IN DATES AS YOU COMPLETE REGULAR SERVICE		BEFORE EACH USE	AFTER EACH USE	EVERY 10 HOURS	EVERY 25HOURS OR EVERY SEASON	BEFORE STORAAGE	SERVICE DATES
MOWER	Check for loose fasteners	✓				✓	
	Clean/Inspect Grass Catcher (If Equipped)	✓	✓			✓	
	Clean Lawnmower		✓			✓	
	Clean Under Drive Cover (Power-Propelled Mowers)			✓		✓	
	Check/Sharpen/Replace Blade				✓3		
	Lubrication Chart				✓	✓	
ENGINE	Change Engine Oil				✓		
	Check Engine Oil Level	✓			✓1、 2		
	Clean Air Filter			✓2			
	Inspect Muffler				✓		
	Clean or replace Spark Plug				✓		
	Replace Air Filter Paper Cartridge				✓		

1. Change more often when operating under a heavy load or in high ambient temperatures.
2. Service more often when operating in dirty or dusty conditions.
3. Replace blades more often when mowing in sandy soil.

GENERAL RECOMMENDATIONS


The warranty on this lawnmower does not cover articles that have been subjected to operator abuse or negligence.To maintain a complete coverage by the warranties provided,the operator must maintain the mower as instructed in

this manual.For a proper maintenance of your mower,some adjustments will need to be made periodically.All adjustments in the Service Adjustments section of this manual should be checked at least once each season.

Service and Adjustments section of this manual should be checked at least once each season.

- Once a year, replace the spark plug, clean or replace air filter element and check blade for wear. A new spark plug and clean/new air filter element assures proper air-fuel mixture and helps your engine run better and last longer.

- Follow the maintenance schedule in this manual.

**WARNING: MAKE SURE DOING ALL OPERATIONS WHEN THE ENGINE STOPPED.**

BEFORE EACH USE

1. Check engine oil level.
2. Check for loose fasteners.

LUBRICATION

Keep unit well lubricated.

LAWN MOWER

Always observe safety rules when performing any maintenance.

TIRE

- Keep tires free of gasoline, oil, or insect control chemicals which can harm rubber.
- Avoid stumps, stones, deep ruts, sharp objects and other hazards that may cause tire damage.

BLADE CARE

For best results, mower blade must be kept sharp. Replace bent or damaged blades.

TO REMOVE BLADE

- 1.Disconnect spark plug wire from spark plug and place wire where it cannot come in contact with spark plug.
- 2.Turn lawn mower on its side. Make sure air filter and carburetor are up.
- 3.Use a woodblock between blade and mower deck to prevent blade from turning when removing blade bolt.


- NOTE:** Protect your hands with gloves and/or wrap blade with heavy cloth.
- 4.Remove blade bolt by turning counter-clockwise.
  - 5.Remove blade and attaching hardware.

**NOTE:** Remove the blade adapter and check the key inside hub of blade adapter. The key must be in good condition to work properly. Replace adapter if damaged.

TO REPLACE BLADE

- 1.Position the blade adapter on the engine crankshaft.Be sure key in adapter and crankshaft keyway are aligned.
- 2.Be sure the trailing edge of blade(opposite sharp edge) is up toward the engine.
- 3.Install the blade bolt with the spring washer into blade adapter and crankshaft.
- 4.Use block of wood between blade and lawn mower housing and tighten the blade bolt, turning clockwise.

Fig.12

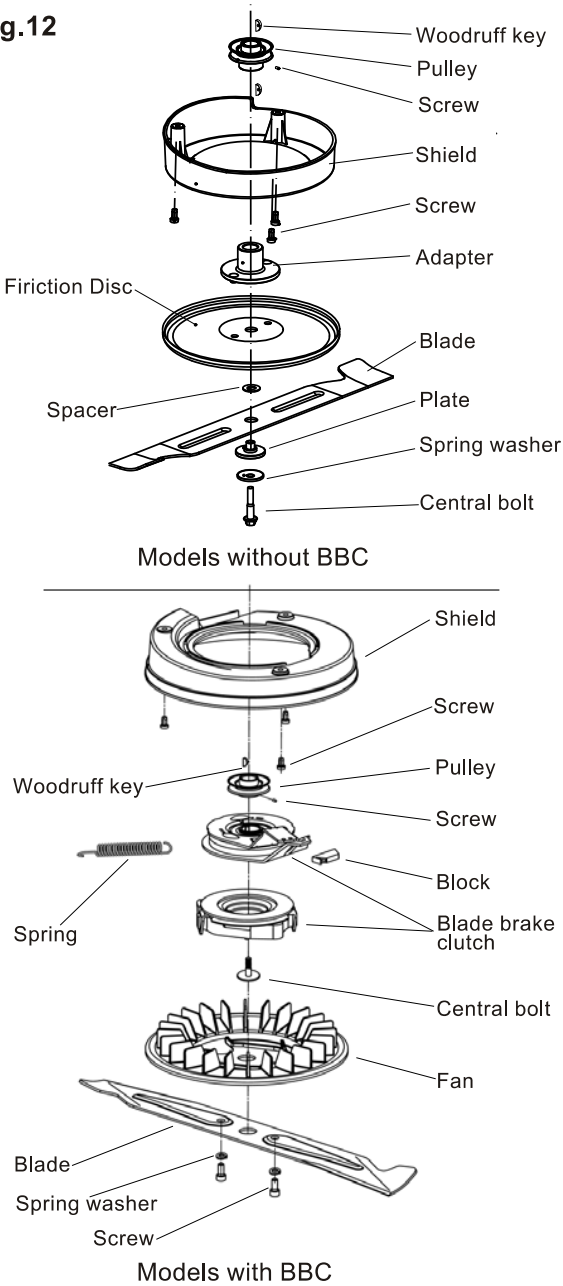

**IMPORTANT: BLADE BOLT IS GRADE 10.9 HEAT TREATED.**

TO SHARPEN BLADE

**NOTE:** We do not recommend sharpening blade but if you do, be sure the blade is balanced.

Care should be taken to keep the blade balanced.An unbalanced blade will cause eventual damage to lawn mower or engine.

- The blade can be sharpened with a file or on a grinding wheel. Do not attempt to sharpen while on the mower.
- To check blade balance, drive a nail into a beam or wall. Leave about one inch of the straight nail exposed. Place center hole of blade over the head of the nail. If blade is balanced, it should remain in a horizontal position. If either ends of the blade moves downward, sharpen the heavy end until the blade is balanced.







# STORAGE

Immediately prepare your lawn mower for storage at the end of the season or if the unit will not be used for 30 days or more.

## LAWN MOWER

When lawn mower is to be stored for a period of time, clean it thoroughly, remove all dirt, grease, leaves, etc. Store in a clean, dry area.

- 1.Clean entire lawn mower (See “CLEANING” in the Customer Responsibilities section of this manual)
- 2.Lubricate as shown in the Customer Responsibilities section of this manual.
- 3.Be sure that all nuts, bolts, screws, and pins are securely fastened. Inspect moving parts for damage, breakage and wear. Replace if necessary.
- 4.Touch up all rusted or chipped paint surfaces; sand lightly before painting.

## HANDLE

- You can fold your lawn mower handle for storage.
- 1.Loosen the two locking levers on both sides of the upper handle and pivot it forward and allow it to rest on the mower.
  - 2.Pull two locking levers to lock upper handle.
  - 3.When setting up your handle from the storage position, remember releasing two locking levers locking into the mowing position.

## ENGINE

### FUEL SYSTEM

**IMPORTANT:** IT IS IMPORTANT TO PREVENT GUM DEPOSITS FROM FORMING IN ESSENTIAL SYSTEM PARTS SUCH AS CARBURETOR. FUEL FILTER, FUEL HOSE, OR TANK DURING STORAGE. ALSO, EXPERIENCE INDICATES THAT ALCOHOL BLENDED FUELS(CALLED GASOHOL OR USING ETHANOL OR METHANOL) CAN ATTRACT MOISTURE WHICH LEADS TO SEPARATION AND FORMATION OF ACIDS DURING STORAGE.ACIDIC GAS CAN DAMAGE THE FUEL SYSTEM OF AN ENGINE WHILE IN STORAGE.

- Drain the fuel tank.
- Start the engine and let it run until the fuel lines and carburetor are empty.
- Never use engine or carburetor cleaner products in the fuel tank or permanent damage may occur.
- Use fresh fuel next season.

NOTE: Fuel stabilizer is an acceptable alternative in minimizing the formation of fuel gum deposits during storage. Add stabilizer to gasoline in fuel tank or storage container. Always follow the mix ratio found on stabilizer container. Run engine at least 10 minutes after adding stabilizer to allow the stabilizer to reach the carburetor. Do not drain the gas tank and carburetor if using fuel stabilizer.

Drain oil (with engine warm) and replace with clean engine oil. (See “ENGINE” in the CUSTOMER RESPONSIBILITIES section of this manual).

## CYLINDER

- 1.Remove spark plug.
- 2.Pour one ounce (29ml) of oil through spark plug hole into cylinder.
- 3.Pull starter handle slowly a few times to distribute oil.
- 4.Replace with new spark plug.

## BATTERY

Remove the battery from the engine if storing for long periods. Store the battery in an area that doesn't experience high variants of temperature.


### CAUTION-PREVENT ENVIRONMENTAL

The battery and charger have a separate collection mark.This indicates that for disposal, the battery and battery charger they must be taken to an authorized disposal site. They must not be disposed of with general waste. EU Directive 2002/96/EC classify these products as electrical or electronic equipment.


Please contact your local authority or local dealer and ask for details regarding the correct method of disposal.

## OTHER

- Do not store gasoline from one season to another.
- Replace your gasoline can if your can starts to rust. Rust and /or dirt in your gasoline will cause problems.
- If possible, store your unit indoors and cover it to give protection from dust and dirt.
- Cover your unit with a suitable protective cover that does not retain moisture. Do not use plastic. Plastic cannot breathe which allows condensation to form and will cause your unit to rust.



**IMPROTANT:** NEVER COVER MOWER WHILE ENGINE AND EXHAUST AREAS ARE STILL WARM.



**CAUTION:** Never store the lawn mower with gasoline in the tank inside a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.

# TROUBLE SHOOTING POINTS※

PROBLEM	CAUSE	CORRECTION
Does not start	1.Dirty air filter.	1.Clean/replace air filter.
	2.Out of fuel.	2.Fill fuel tank.
	3.Stale fuel.	3.Drain tank and refill with fresh clean fuel.
	4.Water in fuel.	4.Drain fuel tank and carburetor and refill tank with fresh gasoline.
	5.Spark plug wire is disconnected.	5.Connect wire to plug.
	6.Bad spark plug.	6.Replace spark plug.
	7.Loose blade or broken blade adapter.	7.Tighten blade bolt or replace blade adapter.
	8.Control bar in released position.	8.Depress control bar to handle.
	9.Control bar defective.	9.Replace control bar.
Starter rope hard to pull	1.Engine flywheel brake is on when control bar is released.	1.Depress control bar to upper handle before pulling starter rope.
	2.Bent engine crankshaft.	2.Contact a qualified service center.
	3.Blade adapter broken.	3.Replace blade adapter.
	4.Blade dragging in grass.	4.Move lawn mower to cut grass or to hard surface.
Grass catcher not filling	1.Cutting height too low.	1.Raise cutting height.
	2.Lift on blade worn off.	2.Replace blade.
	3.Catcher not venting air.	3.Clean grass catcher.
Hard to push	1.Grass is too high or wheel height is too low.	1.Raise cutting height.
	2.Rear of lawn mower housing/blade dragging in grass.	2.Raise rear of lawn mower housing one (1) setting higher.
	3.Grass catcher too full.	3.Empty grass catcher.
	4.Handle height position not right for you.	4.Adjust handle height to suit.
Loss of drive power propelled	1. Belt wear.	1.Check/replace drive belt.
	2.Belt off of pulley.	2.Check/reinstall drive belt.
	3.Dirt in drive pinions.	3.Clean drive pinions.
Loss of power	1.Rear of lawn mower housing of cutting blade dragging in heavy grass.	1.Set to “Higher Cut” position.
	2.Cutting too much grass.	2.Set to “Higher Cut” position.
	3.Dirty air filter.	3.Clean/replace air filter.
	4.Buildup of grass, leaves, and trash under mower.	4.Clean underside of mower housing.
	5.Too much oil in engine.	5.Check oil level.
	6.Walking speed too fast.	6.Cut at slower walking speed.
Poor cut-uneven	1.Worn, bent or loose blade.	1.Replace blade. Tighten blade bolt.
	2.Wheel heights uneven.	2.Set all wheels at same height.
	3.Buildup of grass, leaves and trash under mower.	3.Clean underside of mower housing.
Excessive vibration	1.Wom, bent or loose blade.	1.Replade blade. Tighten blade bolt.
	2.Bent engine crankshaft.	2.Contact a qualified service center.

※1) Ensure the engine and blades are stopped and the spark plug disconnected before performing any maintenance, do not touch the engine muffler after use at very high temperature.

**ATTENTION!** Before the mower is stored, make sure the engine cool.

**TRANSPORTATION:**

Turn off the engine. Make sure the blade are not bent or damaged when you are pushing the mower over obstacles.

## WARRANTY

Proper maintenance of your Weibang equipment is the owner's responsibility. Follow the instructions in your owners guide for correct lubricants and maintenance schedule. Your Weibang dealer carries a complete line of quality lubricants and filters for your equipments engine, transmission, chassis and attachments.

We provide a 2 year warranty from date of purchase: During that time we will replace we assure a free of charge replacement of any part or parts found to be defective in material or workmanship or both, after examination by an authorized dealer, or by the service department of Weibang. We will supply repair services for the machine during a warranty period limited to 2 years.

A warranty period of 90 days applies to machines used for commercial purposes.

If your lawnmower has malfunctioned within the warranty period, and on presentation of a properly filled in warranty certificate and the purchase invoice, please contact with Globalpower Garden Machine Bvba or Yangzhou Weibang Garden Machine, if there is no authorised maintenance station or dealer in your area. The machine will be repaired expense depended on warranty certificate and invoice.

All normal wear and tear and/or consumable parts are protected from manufacturer's defects in material and workmanship for a period of thirty (30) days from the date of purchase.

Damages caused by an inappropriate or faulty operation, by non-observance of the safety regulations and operating instructions contained in this manual, by unauthorised repairs or a dismantling of the machine by unauthorised persons, or any other deficiency that cannot be attributed to faulty workmanship or materials, do not fall under this guarantee. Such deficiencies, malfunctions or damages are the sole responsibility of the owner, and eventually necessary repairs are at the owner's expense.

This limited warranty gives you specific legal rights, and which is in addition to any statutory rights to which you may be entitled and your statutory rights are not affected by this warranty. If you need additional information concerning this written warranty, or assistance in obtaining services, please contact:

Yangzhou Weibang Garden Machine Company Limited  
Hanjiang Industrial Park  
Yangzhou, Jiangsu, P. R. CHINA  
Tel: +86-514-87849959, +86-514-87849975 Fax: +86-514-87849938  
Email questions and comments to:  
Sale@weibang.com  
Visit our website:  
www.weibang.com

## EC DECLARATION OF CONFORMITY

Business name of the manufacturer: **Yangzhou Weibang Garden Machine Company Limited**

full address of the manufacturer: **Hanjiang Industrial Park, Yangzhou City,  
Jiangsu Province 225127, P. R. China**

name and address of the person (established in the Community) compiled the technical file:  
**Cristoph Meyer, Bochstraße 1, D23569 Lubeck, Germany**

We declaring that the machinery

product name: **Lawnmower**

commercial name: **Petrol professional Lawnmower**

function: **service for agriculture**

Models:

WB486SBV-R (48V) WB486SBV-R (48VB)

WB486SKV-R (48PRO) WB486SKV-R (48PRO BBC)

**WB487SCV-R WB487SCV-R-BBC**

WB567SBV-R (56V) WB567SBV-R (56VE) WB567SKV-R (56PRO)

**WB567SCV-R WB567SCV-R-BBC**

type: **gasoline powered**

serial number:

fulfils all the relevant provisions of Directives:


**2006/42/EC, 2014/30/EU, 2000/14/EC**

and tested in accordance with below standards:

**EN ISO 5395-1:2013+A1; EN ISO 5395-2:2013+A1+A2; EN ISO 14982:2009**

place and date of the declaration: **Jiangsu 2024-10-18**

signature of the person:

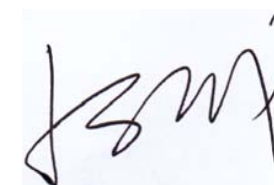

Sucheng Ju  
(General Manger)





DECLARATION OF CONFORMITY

Business name of the manufacturer: Yangzhou Weibang Garden Machine Company Limited

full address of the manufacturer: Hanjiang Industrial Park, Yangzhou City, Jiangsu Province 225127, P. R. China

name and address of the person (established in the Community) compiled the technical file: Stewart Anderson, Wincanton Business Park · Wincanton · Somerset · BA9 9RS, UK

We declaring that the machinery

product name: Lawnmower

commercial name: Petrol professional Lawnmower

function: service for agriculture

Models:

WB486SBV-R (48V) WB486SBV-R (48VB)

WB486SKV-R (48PRO) WB486SKV-R (48PRO BBC)

WB567SBV-R (56V) WB567SBV-R (56VE) WB567SKV-R (56PRO)

type: gasoline powered

serial number:

(paste code sticker hear)

fulfils all the relevant provisions of Directives:

Supply of Machinery Safety Regulations 2008 S.I. 2008:1597  
Electromagnetic compatibility Regulations UK SI 2016 No. 1091

and tested in accordance with below standards:

BS EN ISO 5395-1:2013+A1; BS EN ISO 5395-2:2013+A1+A2; BS EN ISO 14982:2009

place and date of the declaration: Jiangsu 2024-10-18

signature of the person:

Sucheng Ju  
(General Manger)

WEIBANG WARRANTY REGISTRATION

Customer keep

Congratulations for choosing an WEIBANG product to meet all your tough jobsite needs! Please file your original bill of purchase for this unit in a safe place. For warranty service of your WEIBANG product, you will need to provide a copy of this document to confirm your warranty status.

Product registration is a key step toward enjoying your new WEIBANG product! While registration is not necessary to enjoy our manufacturer's warranty, there are many benefits to participating in this program. Registration helps to facilitate warranty service, and notify you of any updates, changes, and service advisories on your product. Complete this Warranty Registration Card and fax it to \_\_\_\_\_ or mail it to the address on the back of this card within 14 days.

Data Protection: your data will be held and used by WEIBANG and their authorized dealers for warranty administration and marketing purposes only. WEIBANG will not forward this data to third parties.

If you do not wish to receive marketing information please tick box. ☐

Warranty Registration Information			
A .Ownership Information			
Owner's Name:			
Owner's Address:			
Post code:		Country:	
B .Machine Information			
Date of purchased:			
Machine Model:			
Machine Serial No:			
C. Product Information Update			
Can we contact you with any product-related news?			
Who should we contact?			
Contact Telephone:			
Contact Fax:			
Contact E-Mail:			
What is the preferred contact method?			
D. Signature			
Dealer name/address		Signature	
Customers: My signature hereby confirms that I have received the operating instruction intended for the device, instructions and the device free of obvious defects.		Signature	

Lawn Mower Packing List

NAME	QTY.	REMARK
Lawn Mower	1	
Grass Catcher	1	
ENGINE OPERATOR'S MANUAL	1	
Lawn Mower OPERATOR'S MANUAL	1	

Record of maintenance/service works

Date Type	Content	Maintenance technician	Remarks

Additional information of engine:

**Manufacturer's authorised representative of engine 1P70FC**  
CMD Costruzioni Motori Diesel Spa  
Nucleo Industriale Valle di Vitalba – 85020 – Atella (Potenza) - Italy  
**CO2 emissions:** 879.62 g/kWh

Europe Stage V Type Approval Number	Engine Category	Engine Models	CO2(g/k Wh)	Test Cycle
e13*2016/1628*2017/656SRA1/P*0081*00 e13*2016/1628*2016/1628SRA1/P*0081*01	NRS.196V	1P70FC	879.62	G2

**Manufacturer's authorised representative of engine FJ180V**  
Kawasaki Motors Europe N.V.  
Jacobus Spijkerdreef 1- 3, 2132 PZ Hoofddorp, The Netherlands  
**CO2 emissions:** 1068 g/kWh

Europe Stage V Type Approval Number	Engine Category	Engine Models	CO2(g/k Wh)	Test Cycle
e13*2016/1628*2016/1628SRA3/P*0119*02	NRS-vr-1a	FJ180V	1068	G2

**Manufacturer's authorised representative of engine 750EX DOV / 850E Series**  
Briggs & Stratton Germany GmbH.  
Max-Born-Straße 2, 68519 Viernheim, Germany  
**750EX DOV CO2 emissions:** 873.61 g/kWh  
**850E Series CO2 emissions:** 891.76g/kWh

Europe Stage V Type Approval Number	Engine Category	Engine Models	CO2(g/k Wh)	Test Cycle
e5*2016/1628*2016/1628*SYA1/P*1029*00	NRS-vi-1a	750EX DOV (1006)	873.61	G1
e5*2016/1628*2021/1398SYA2/P*1039 *01	NRS -vi-1a	850E Series (123P)	891.76	G1

WEIBANG WARRANTY REGISTRATION

Return to Dealer

Congratulations for choosing an WEIBANG product to meet all your tough jobsite needs! Please file your original bill of purchase for this unit in a safe place. For warranty service of your WEIBANG product, you will need to provide a copy of this document to confirm your warranty status.

Product registration is a key step toward enjoying your new WEIBANG product! While registration is not necessary to enjoy our manufacturer's warranty, there are many benefits to participating in this program. Registration helps to facilitate warranty service, and notify you of any updates, changes, and service advisories on your product. Complete this Warranty Registration Card and fax it to \_\_\_\_\_ or mail it to the address on the back of this card within 14 days.

Data Protection: your data will be held and used by WEIBANG and their authorized dealers for warranty administration and marketing purposes only. WEIBANG will not forward this data to third parties.

If you do not wish to receive marketing information please tick box. ☐

**Warranty Registration Information**

**A .Ownership Information**

Owner's Name:

Owner's Address:

Post code:

Country:

**B .Machine Information**

Date of purchased:

Machine Model:

Machine Serial No:

**C. Product Information Update**

Can we contact you with any product-related news?

Who should we contact?

Contact Telephone:

Contact Fax:

Contact E-Mail:

What is the preferred contact method?

**D. Signature**

Dealer name/address

Signature

Customers: My signature hereby confirms that I have received the operating instruction intended for the device, instructions and the device free of obvious defects.

Signature